


INSTALLATION ORDER:

1. ROLL OUT BASE SHEET ON FIELD. BASE SHEET TURNED DOWN OVER EDGE TO COVER NAILERS
2. ROLL OUT CAP SHEET.
3. PLACE SPILLOUT SCUPPER PAN IN PLACE, SET IN APPROVED ADHESIVE AND NAIL PER SPECIFICATIONS.
4. LAY DOWN BASE SHEET PATCH, OVERLAP PAN BY 2", DO NOT TURN DOWN AT EDGE.
5. LAY DOWN CAP SHEET PATCH, OVERLAP BASE SHEET BY 3½", DO NOT TURN DOWN AT EDGE.
6. APPLY SEALANT TO EXPOSED ROOF EDGE.
7. NOTCH BASE FRAME BELOW SPILLOUT SCUPPER PAN. INSTALL R-MER EDGE PER MANUF. SPECIFICATIONS.
8. NOTCH FASCIA COVER TO FIT BELOW SPILLOUT SCUPPER PAN. INSTALL FASCIA COVER PER MANUF. SPECIFICATIONS, WITH 6" SPLICE PLATE, PAINTED TO MATCH COVER.

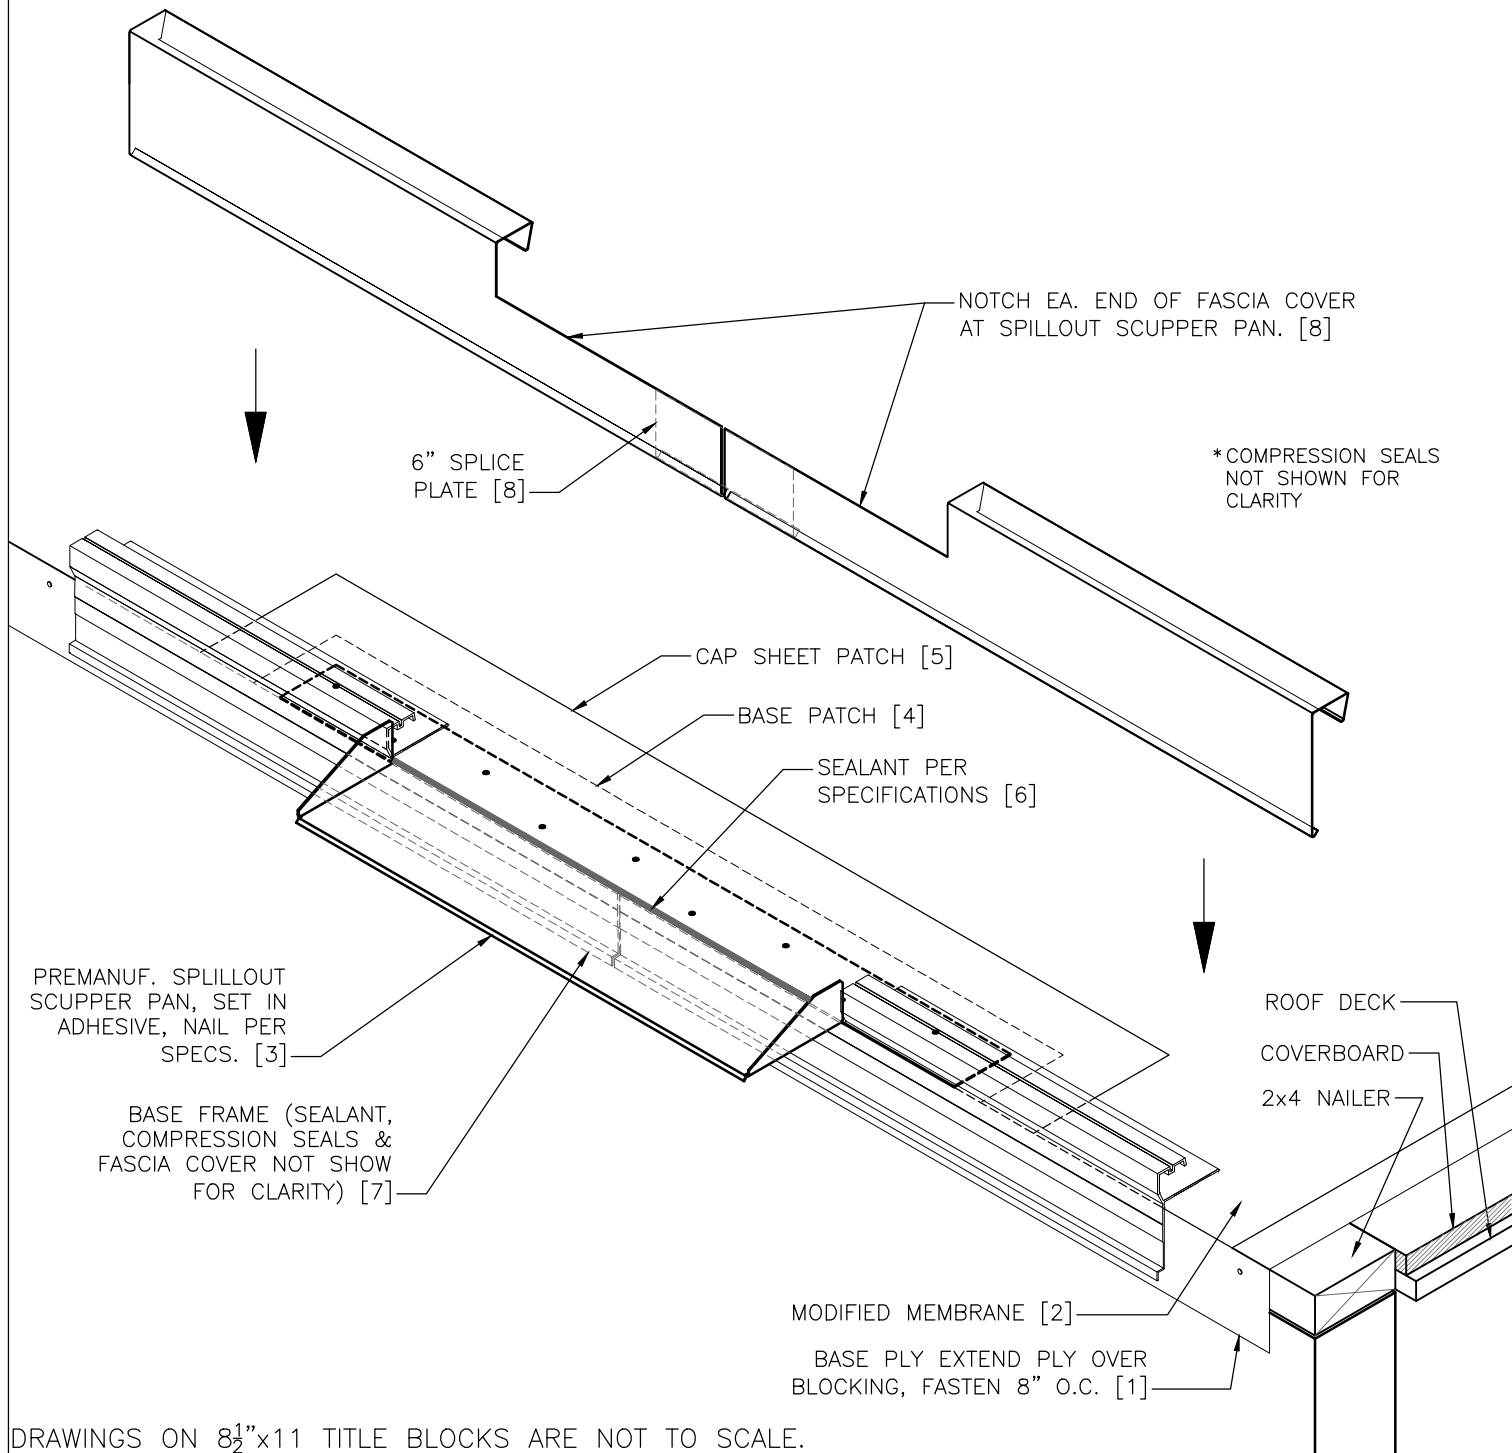

DRAWINGS ON 8½"x11 TITLE BLOCKS ARE NOT TO SCALE.

SPILLOUT SCUPPER



THE GARLAND COMPANY, INC.
GARLAND CANADA, INC.
THE GARLAND COMPANY UK, LTD

PROJECT:

CUSTOMER:

ARCHITECT:

REPRESENTATIVE:

DATE:

SHT:

OF